


SSS SIEDLE

**Programming
Instructions**
AC 3000-01

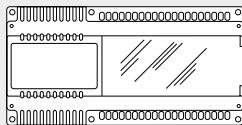

Contents

Amplifier Controller 3000-01		Receiving group calls	
General remarks		Group assignment	21
Call number assignment	3		
Remote programming		Receiving collective calls	
Programming remark	4	Announcement exclusion	22
Programming structure			
SIC/ICI 3000-01	5	Messages	23
Switching the service mode on and off	6		
Switching the programming mode on and off	7	Messages, Alarm type	24
Programming structure			
AC 3000-01	8	Entitlement to receive emergency calls	
		Break	25
		Door and storey parallel call	26
Programmable menu points	9		
Volume control speech/music	10		
Volume control speech/music			
Music on/off	11		
Volume control call tone			
Speech control of the			
AC 3000-01	12		
Language	13		
Software status / own call number			
Basic status	14		
Main menu			
Volume	15		
Volume			
Music/speech	16		
Volume			
Call tone	17		
Volume			
Music on/off	18		
Volume			
Access table	19		
Announcements	20		

Amplifier Controller 3000-01

General remarks

Call number assignment

The Intercom System is programmed in dialogue with the operator using a display-supported system.

In order to ensure fast, correct programming, before entering data, the operator should ensure that the system has been completely installed and correctly connected to the mains.

The entire Intercom System, i.e. all the components connected to the bus, can be programmed from any optional SIC/ICI 3000-01. This means that the AC 3000-01 can be programmed from any call station of your choice.

In order to prevent unauthorized access to the programming menu, this is protected by a code word.

Call number assignment

All new instruments are set in the factory for the call number „00“. In order to allow programming of an Amplifier Controller, the instrument must first be given its own call number. The assignment of call numbers is performed by setting the rotary switch at the AC 3000-01. The call number can be assigned using the rotary switches for tens and units within the range „0 - 99“. There is a status LED underneath the two rotary switches. This flashes when a different unit connected to the same bus already exists with the same number. If the status LED does not turn off after setting the call number, but continues to flash, an inadmissible number has been assigned, i.e. one that is already taken. In the case of single-bus systems, depending on how the call number length has been determined, the entered number either remains with two digits or is automatically supplemented by the two digits „00“ in front. In the case of multiple bus systems, the call number of all call stations always has four digits. The 2-digit AC call number is automatically supplemented by a prefix which is the same as the 2-digit bus number, e.g. AC call number „10“ at bus number „20“ results in the AC call number „2010“.

Remark

The assignment of call numbers can be performed when the system is either connected or disconnected from the mains. Read-in of the new call numbers is performed automatically, no reset process is therefore necessary.

Remote programming

Programming remark

Remote programming

All the units connected to the system bus can be programmed using any optional SIC/ICI 3000-01 Intercom call station. The condition for remote programming is the correct

assignment of a call number for each unit. This is particularly important to note when first putting the system into service. If the power supply fails for one or both call stations during programming, both units return

to the starting status after an automatic reset.

Programming remark

In the programming menu of the AC 3000-01, the menu points appear in the sequence indicated on page 35. It is possible to scroll forwards through the menu with the R button, and backwards using the F button. In the sub-menus for configuration

selection, the R button is used to scroll forwards, while the F button takes you back to the previous menu point in the main menu.

In all menus, it is possible to change the menu point to the required function by entering „0, 1“ or a sequence of numbers.

Inputs do not have to be confirmed. When scrolling forwards, automatic intermediate storage of the inputs takes place. After leaving the programming mode (with the C button), the inputs are taken over into the memory by an automatic unit reset.

If you do not wish to change the value indicated in the display, scroll onwards **or**



R button scrolls forwards
F button scrolls back

change the value and then scroll onwards



Enter "0, 1" or a number sequence



R button scrolls forwards
F button scrolls back

or




In the submenus for configuration selection:
R button scrolls forwards
F button scrolls back into the main menu

Remark

This procedure is identical for every point appearing in the programming menu.

Programming structure SIC/ICI 3000-01

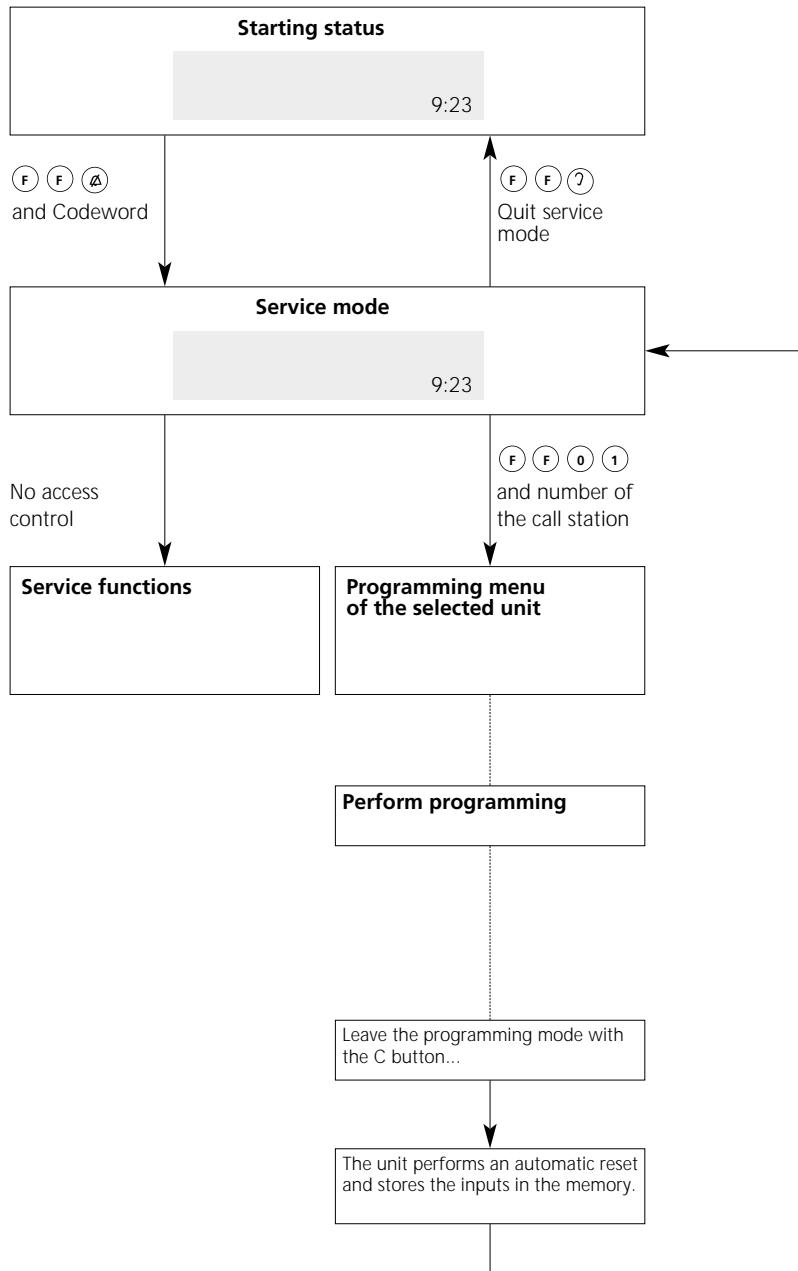

Switching the service mode on and off

In order to branch into the programming mode of the AC 3000-01, it is first necessary to change into the service mode. Entry into the service mode is

protected by password. On delivery, the code word 1000 is set as a default value.

Note

If the code word is entered 3x incorrectly in consecutive sequence, the SIC/ICI 3000-01 is disabled for around 6 minutes.

Switching on the service mode

Remark:

The interval between pressing 2 buttons must not exceed 1.5 seconds. Your input must therefore be made quickly.



Function

Press the F button 2x and press the call disable button.

System

The display changes from

to

Service mode

and

Code word ?



Service mode

Enter the default (1000) or personal code number

Code word ? #####

Display

Service mode

Display

active

Switching off the service mode

Remark:

The interval between pressing 2 buttons must not exceed 1.5 seconds. Your input must therefore be made quickly.



Function

Press the F button 2x and press the listen-in button

System

The display changes from

to

Service mode

and

passive

Switching the programming mode on and off


If you wish to change the default or personalized programming of any particular call station, this is only possible in the programming mode.

It is only possible to branch into the programming menu if every call station you wish to program already has its own call number. Before it is possible to activate

programming of the AC 3000-01, the SIC/ICI 3000-01 from which programming has to take place must be switched into the service mode.

Switching on the programming mode

The programming menu of the AC is activated by pressing "F, F, 0, 1" and the call number of the AC 3000-0. Remote programming of a different unit, e.g. SIC, BC, is carried out by entering its call number.

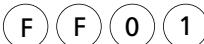

Enter numbers "F, F, 0, 1"

Remark:
The interval between pressing 2 buttons must not exceed 1.5 seconds. Your input must therefore be made quickly.

Function

The display changes from

System

to

Configuration
Call number

and

○○
○○○
○○○○

Enter the call number of the unit you wish to program (e.g. 4)

Configuration
Call number

---4

Switching off the programming mode

To terminate the programming sequence, leave the programming mode by actuating the C button.



Press the C button

The AC now performs an automatic reset and is then ready for operation.

Display


9:23

After the reset, you are back in the service mode and can continue by programming another unit at the system bus by reactivating the programming mode with the new call number.

Note

After completion of programming, switch off the service mode manually. This safeguards against unauthorized access before the system automatically switches off the programming mode (appr. 10 minutes).

Programming structure AC 3000-01

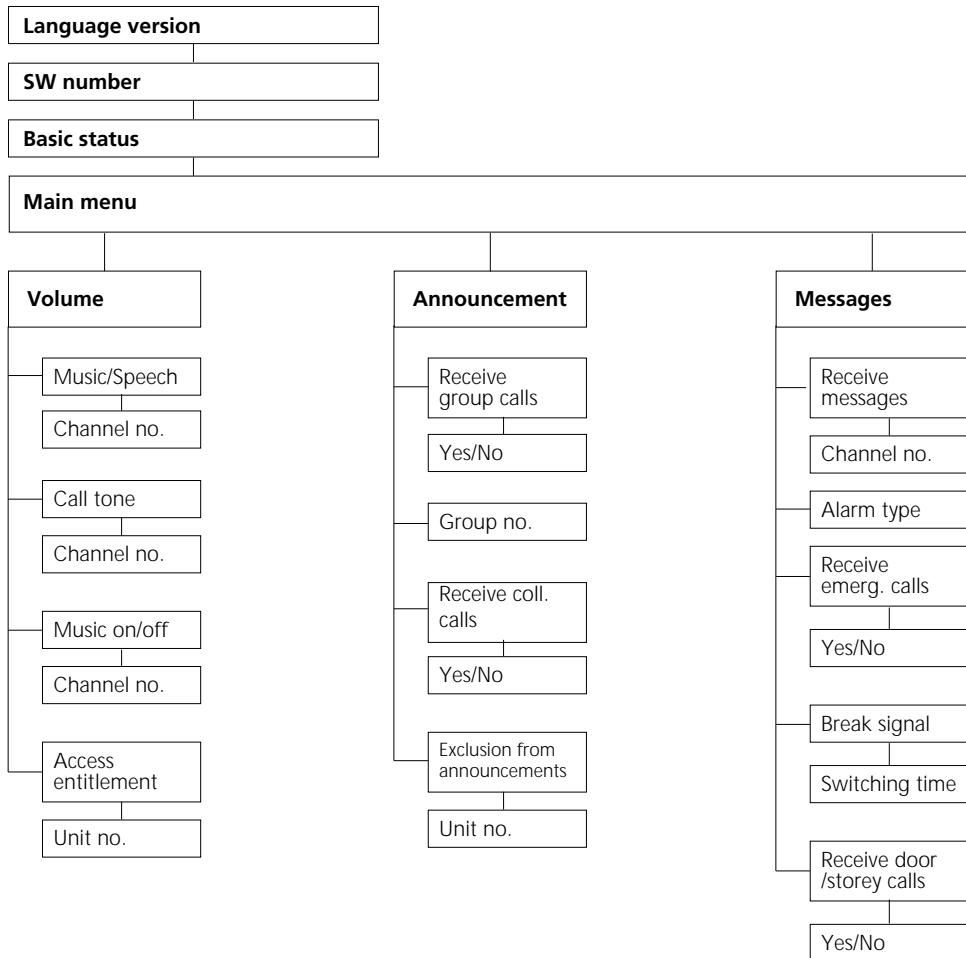

Programmable menu points

Programmable menu points	Programming possibilities	Default setting
Language version	D, GB, F, NL, DK, I	German
Software status/Call number	---	---
Basic status	yes/no	no

Main menu 0= Volume 1= Announcements 2= Messages

Volume menu

• Channel number for music and speech volume	1- 254	0
• Channel number for call tone volume	1- 254	0
• Channel number for music on/off	1- 254	0
• Access entitlement (max. 8 inputs)	0 - 9999	0000

Announcement menu

• Entitlement to receive group calls	yes/no	yes
• Group assignment	1 - 9	1
• Entitlement to receive collective calls	yes/no	yes
• Exclusion from receiving announcements (max. 8 inputs)	0 - 9999	---

Messages menu

• Receive messages (max. 8 channels)	1 - 254	----
• Receive alarm types (max. 3 inputs)	1 - 3	----
• Entitlement to receive emergency calls	yes/no	no
• Break signal table (max. 8 switching times)	---	---
• Entitlement to receive door/storey calls	yes/no	no

Volume control speech/music

Operating the volume control

To permit the volume to be altered, entitlement must have been granted. This is entered in the access table in the volume submenu.

Remark:

Volume control for music and speech is performed using the same channel number. For speech volume, adjust during a speech connection, for music volume when in the idle status.

Volume is set digitally in 16 stages. This means that it may be necessary to repeat this function several times to set the volume you require. On the lowest volume setting, the call tone volume is switched off altogether.

Basic volume control

The basic volume setting is set in the factory to a mean value and must be adjusted if required

using a small screwdriver. The potentiometer for basic setting is marked at the upper connecting terminals with „Level“. It is


possible to alter the volume as described below around this basic value.

Speech volume

You wish to alter the speech volume. Press the button F1 or F2, and then enter the channel

The speech volume can only be altered during an existing call.

number defined for music/speech during programming in the „Volume submenu“.

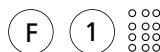

Press F, button 1 and then enter the channel number for a higher volume.



Press F, button 2 and then enter the channel number for a lower volume.

Volume control speech/music

Music on/off

Music volume

You wish to alter the music volume. Press the buttons F, 1 or F, 2, and then enter the channel

number defined for music/speech during programming in the „Volume submenu“.

The music volume can only be altered when there is no existing call and when the music function is switched on.



Press F, button 1 and then enter the channel number for a higher volume.



Press F, button 2 and then enter the channel number for a lower volume.

Music on/off

If you wish to switch the music on or off, press the buttons F, 1 or F, 2 and then the channel number which was defined during programming in the submenu for music volume on/off.



Press F, button 1 and then enter the channel number for music on.




Press F, button 2 and then enter the channel number for music off.

Volume control call tone

Speech control of the AC 3000-01

Volume control calling tone

If you wish to alter the volume of the call tone, press the buttons F, 1 or F, 2 and enter the channel number defined during programming in the „volume submenu“ for the call tone.

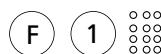

The call tone volume can only be altered when there is no call in progress.

Speech control

The AC 3000-01 is an amplifier unit without a keypad. It is therefore only possible for a call to be held between the SIC and an AC

in semi-duplex operation. The call must be manually controlled from a SIC using the Tiptronic button.

Call the AC, for example with the number 2003.



Press F, 1 and the channel number for a higher volume.

Press F, 2 and the channel number for a lower volume.

At the called AC, a call signal sounds and the unit is automatically switched for speech. At the MVI 3000-0 connected to the AC, the green voice direction LED lights up. At the same time, the microphone disable LED lights up at the SIC.

AC connection
Call number 2003

Enter the call number of the AC

Display



LED lights up

By actuating the Tiptronic button at the SIC/ICI the speech direction of both units can be reversed.



Actuate the Tiptronic button in order to change the speech direction.

By pressing the „C“ button, or putting down the receiver, the call is terminated and the semi-duplex mode is switched back off again.



Press the C button or replace the receiver.

Language

Speech

To select the language, enter the required code letter.

Deutsch = 0
Code number: 0

Display changes continuously from

English = 1
Code number: 0

to

Français = 2
Code number: 0

and

Nederlands = 3
Code number: 0

and

Dansk = 4
Code number: 0

and

Italiano = 5
Code number: 0

and

888
888
888

Enter the required code number

(R) / (F)

R button scrolls forwards
F button scrolls back

Software status/Own call number

Basic status

Software status

Own call number

Under this menu point, the software version and the call number set at the AC are displayed. The AC call number is automatically supplemented here by prefixing the bus number.

113560	2.00	XX	Display
AC3000		2002	(e.g. AC call number 2002)



R button scrolls forwards
F button scrolls back

Remark

This menu point exercises a pure display function. For this reason, no changes or inputs can be made. The call number of the AC is changed by setting the rotary switch at the AC itself.

Basic status

If the basic status is activated by entering „1“ and if the programming mode is quitted with the C button, all menu points of the unit revert to the default basic status.

Basic status	Display changes continuously from
Code number: 0	

0 = no, 1 = yes	to
Code number: 0	



“0“ not to activate the basic status
“1“ to activate the basic status



R button scrolls forwards
F button scrolls back

Main menu

Volume

Main menu

From this programming level, it is possible to change into the submenu of your choice by entering the relevant code number. The programming structure on page 34 provides a survey of the submenus on the right.

Volume = 0

Selection: 0

Display changes continuously from

Announcements = 1

Selection: 0

to

Messages = 2

Selection: 0

and

Remark: In all the submenus for configuration selection, it is possible to scroll forwards and back with the R or F button.

888
888

Enter required code number



R button scrolls forwards
F button scrolls back

Deleting inputs

Using the door release button, the inputs indicated in the display can be deleted.



Delete inputs with the door release button

Volume

The volume levels for music/speech and call tone are adjusted digitally in 16 stages. Both volume control and music on/off are effected by means of remote control functions.

888
888

Enter required code number



R button scrolls forwards
F button scrolls back

Only the units entered in the access table can perform the volume control and the music on/off functions using F1 or F2 and the channel number.

Remark:

If it is not possible to set the optimum volume for local circumstances, this may be possible by changing the basic volume as described above.

Volume Music/Speech

Volume

In order to change the channel number for music/speech volume, enter the number „0“.

0 = Music/Speech

Volume: 0

Display changes continuously from

1 = Call tone

Volume: 0

to

2 = Music on/off

Volume: 0

and

3 = Access table

Volume: 0

and



Enter the required menu point and press the R button

Music/Speech

Using the channel number entered here, the music and speech volume is controlled by means of remote control functions.

Music/speech

Channel number: 000

Display changes continuously from

Volume

Channel number: 000

to



Enter the required channel number or delete the existing input using the door release button

In the idle status, this channel number is used to change the music volume, while the speech volume is adjusted during an existing speech connection.

Pressing the F button returns you to the previous menu.



Press the F button

Volume Call tone

Volume

In order to alter the channel number for the call tone volume, enter the number „1“.

0 = Music/Speech

Volume: 0

Display changes continuously from

1 = Call tone

Volume: 0

to

2 = Music on/off

Volume: 0

and

3 = Access table

Volume: 0

and



Enter the required menu point and press the R button

Call tone

Using the channel number entered here, the call tone volume is adjusted by means of remote control functions. At the lowest setting, the call tone is switched off.

The call tone volume can only be adjusted using this channel number when in the idle status.

Call tone

Channel number: 000

Display changes continuously from

Volume

Channel number: 000

to



Enter the required channel number or delete the existing entry with the door release button.

Pressing the F button returns you to the previous menu.

Press the F button

Volume

Music on/off

Volume

In order to change the channel number for the music switching function, enter the number „2“.

0 = Music/Speech

Volume: 0

Display changes continuously from

1 = Call tone

Volume: 0

to

2 = Music on/off

Volume: 0

and

3 = Access table

Volume: 0

and



Enter the required menu point and press the R button

Music on/off

With the channel number entered here, the music is switched on/off using the remote control function.

Music on/off

Channel number: 000

Display



Enter the required channel number or use the door release button to delete the existing entry



Press the F button

Pressing the F button returns you to the previous menu.

Volume Access table

Volume

To change the access table, enter the number „3“.

0 = Music/Speech

Volume: 0

Display changes continuously from

1 = Call tone

Volume: 0

to

2 = Music on/off

Volume: 0

and

3 = Access table

Volume: 0

and



Enter the required code number and press the R button.

Access table

To define the units you wish to have access to the volume control or music on/off functions, the access table must be processed completely. On delivery, all 8 possible inputs are set to 0000, making all units entitled to access these functions.

Pressing the F button takes you back to the main menu.

Access address

Volume 1/8 0000

Enter the access address, scroll to the next access address with the R button or delete the access address using the door release button.



Example: a

Access address

Volume 1/8 0000

R button scrolls forwards
F button scrolls back

Access entitlement for all units

Example: b

Access address

Volume 1/8 1200

Bus-related access entitlement (all units at bus no. 12)

Example: c

Access address

Volume 1/8 1253

Access entitlement for individual units (unit 53 at bus 12)

Important

If one of the 8 inputs is set to „0000“, all connected units have access to the volume control function.

Announcements

Announcements

It is possible to receive group and collective announcements through the AC 3000-01. In this menu, receive entitlement and

group assignment are defined. In addition, the units are defined from which no group or collective announcements can be initiated via the AC.

From the main menu, selecting „1 = Announcement“ brings you to the announcements menu.

The following functions can be entered in the relevant adjacent menu points:

Group call

Receive entitlement

0 = Rec. group call
Announcement: 0

Display changes continuously from

Group assignment for announcements

1 = Group number
Announcement: 0

to

Collective call

Receive entitlement

2 = Rec. coll. call
Announcement: 0

and

Units excluded from receiving announcements via this AC

3 = Exclusion no.
Announcement: 0

and

⋮⋮⋮

Enter the required menu point

 R / F

R button scrolls forwards
F button scrolls back

Receiving group calls

Group assignment

Receiving group calls

If you do not wish the AC to be capable of receiving group calls, receive entitlement must be disabled.

Group call

Code number: 1

Display changes continuously from

Receive entitlement

Code number: 1

to

0 = no, 1 = yes

Code number: 1

and

0 / **1**

"0" = receive no group calls
"1" = receive group calls

R / **F**

Scroll forwards with the R button
Scroll back with the F button

Group assignment

The AC can be entitled to receive group announcements from all 9 groups or from individual groups.

In the adjacent menu, it is possible to define assignment of the AC to one or more groups.

Groups

Group call 1/9 1

Display changes continuously from

Assignment

Group call 1/9 1

to

ooo
ooo
ooo

Enter the required group number (1-9)

R / **F**

Scroll forwards with the R button
Scroll back with the F button

Enter the group number to which you wish the unit to belong.

Receiving collective calls

Announcement exclusion

Receiving collective calls

If you do not wish the AC to receive any collective calls, entitlement must be disabled.

COLLECTIVE CALL

Code number: 1

Display changes continuously from

RECEIVE ?

Code number: 1

to

0 = no, 1 = yes

Code number: 1

and

 0 / 1

"0" = no entitlement

"1" = receive collective calls

 R / F

R button scrolls forwards

F button scrolls back

Announcement exclusion

To avoid feedback with the AC, announcements must not sound in the room in which they are initiated. Up to 8 units or buses can be disabled for this purpose.

The adjacent menu is used to disable units/buses, as indicated on the example on page 45.

Exclusion no.

Call no. 1/8 ----

Display changes continuously from

for announcements

Call no. 1/8 ----

to

○○○
○○○
○○○

Enter required group no.
(1-9)

 R / F

R button scrolls forwards
F button scrolls back

Enter the unit or bus numbers which you wish to exclude.

Messages

Messages

This menu is used to determine which messages and which alarm types should be acoustically signalled. In addition, the emergency call and door/storey

receive entitlement are defined. A break signal table with up to 8 entries permits signalling on a time-controlled basis. Access the messages menu from the main menu by selecting „2=Messages“.

Remark:

For time-dependent control functions in the Siedle Intercom System, we recommend additionally installing a quartz system clock CLK 3000-0.

The following functions can each be entered in the adjacent menu points:

Entering the channel number for messages

0 = Message

Message: 0

Display changes continuously from

Entering alarm types

1 = Alarm type

to

Message: 0

Emergency call
Receive entitlement

2 = Emergency call

and

Message: 0

Input of times for
break signal

3 = Break

and

Message: 0

Door/ storey call
Receive entitlement

4 = Door / storey call

and

Message: 0

888
888
888

Enter the required menu point



R button scrolls forwards
F button scrolls back

Messages

Alarm type

Messages

The AC can be entitled to receive a max. of 8 messages. When a message is received on a channel which has been enabled at the AC, this is signalled acoustically.

The message appears in the display of the programmed SIC (see programming message texts, SIC/ICI 3000-01).

Enter the channel number from which you wish the messages to be signalled.

Receiving channel

Message 1/8 ---

Display

888
888

Enter the required channel number



R button scrolls forwards
F button scrolls back

Alarm type

The AC can be entitled for all 3 alarm types, whereby the acoustic signal is the same for all alarm types. The plain language text appears in the programmed SIC (see programming message texts, SIC/ICI 3000-01).

Enter the alarm type you wish to be signalled.

Receive alarm 1..3

Alarm type 1/3 -

Display

888
888
888

Enter the required alarm type (1-3)



R button scrolls forwards
F button scrolls back

Entitlement to receive emergency calls

Break signal

Receiving emergency calls

If you wish the AC to be able to receive emergency calls, entitlement must be granted.

Receive emerg. calls

Code number: 0

Display changes continuously from

0 = no, 1 = yes

Code number: 0

to



"0" = no entitlement
"1" = receive emergency calls



R button scrolls forwards
F button scrolls back

Break

Up to 8 times can be entered at the AC at which a break signal sounds. A choice of six different signals is offered.

Enter the time at which you wish an acoustic signal to be sounded.

Time input

Break 1/8 --:--

Display

888
888

Enter required time
hours : minutes



R button scrolls forwards
F button scrolls back

To enter or alter the signal type, scroll on using the R button or back using the F button to the main menu.

The top line of text indicates the available signal types.

0 = Signal tone

Break 1/8 0

Display

888
888

Enter the required break signal type (0-5)



R button scrolls forwards
F button scrolls back

Remark:

For time-dependent control functions in the Siedle Intercom System, we recommend additionally installing a quartz system clock CLK 3000-0.

Door and storey parallel call

Receive entitlement

Door loudspeaker parallel call entitlement

If you wish a call button actuated at the door loudspeaker (or SMF) to sound at several intercoms and at the AC, the AC must be given the relevant entitlement.

DL parallel call
Code number: 0

Display changes continuously from

Receive ?
Code number: 0

to

0 = no, 1 = yes
Code number: 0

and

 / 

"0" = no
"1" = yes

 / 

R button scrolls forwards
F button scrolls back

Remark:
Initiation of a parallel call when pressing a call button is performed by programming the TLC or

SFM 3000-01.

If a door call is received, a 3-tone chime is automatically actuated at the AC, while for a storey call a 2-tone chime sounds.

Index of key terms

A

Access table 19

Alarm type 24

Announcement disable 22

B

Basic status 14

Basic volume control 10

C

Call number accessing 14

Call number assignment 3

Call tone volume 11/17

Code word 6

Collective calls 21/22

D

Default setting 9

Door call 26

E

End of programming 4/7

Emergency call 25

G

General remarks 3

Group assignment 21

L

Language version 13

M

Main menu 9/15

Menu points 8/9

Messages 24

Music on/off 11/18

Music volume 11/16

O

Own call number 14

P

Paging announcements 20

Parallel call 26

Break signal 25

Programming mode 7

Programming possibilities 8/9

Programming remarks 4

Programming structure SIC 5

Programming structure AC 8

R

Receiving group calls 21

Receive entitlement 20/25

Remote programming 4

S

Service mode 6

Software status 14

Speech volume 10/16

Speech control 11

Storey call 26

T

Tiptronic 12

V

Volume control 10/11/12

Volume programming 16-19

SSS SIEDLE

S. Siedle & Söhne

Postfach 1155
D-78113 Furtwangen
Bregstraße 1
D-78120 Furtwangen

Telefon +49 (0) 7723/63-0
Telefax +49 (0) 7723/63-300
Internet: <http://www.siedle.de>
e-mail info@siedle.de

© 1995/05.2000
Printed in Germany
Best.-Nr.
0-1101/214036 GB