WEBRelay™ Dual-III

X-301™ Quick Start Guide

Basic Setup Steps:

(1) Connect unit to power and network.

(2) Set up a computer on the same network as the input module. To do this, set the IP address of the computer to 192.168.1.50 with a netmask of 255.255.255.0.

(3) Configure the X-301 using web browser. Do this by pointing browser to http://192.168.1.2/setup.html. Username is *admin* and password is *webrelay* (all lower case).

(4) Set the permanent IP address in the configuration page. Restart the X-301 (remove power, re-apply power).

After restarting the X-301, set the computer back to its original settings and access the X-301 at its new IP address.
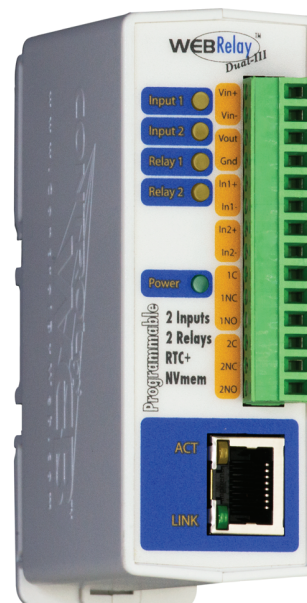
(5) Connect relay contacts.
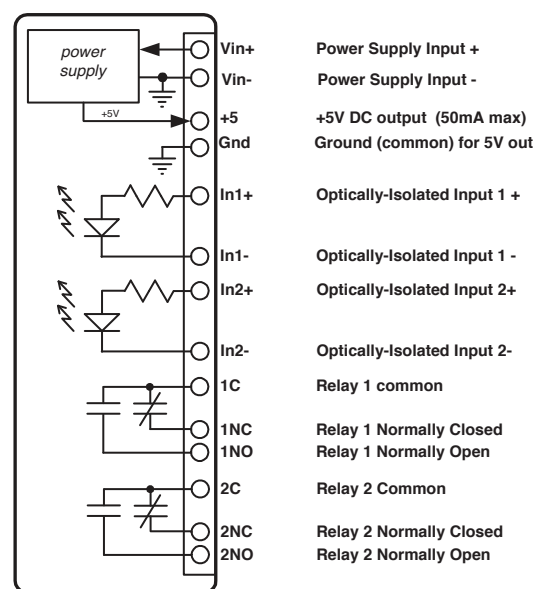
Factory Default Settings

IP Address: 192.168.1.2
Subnet Mask: 255.255.255.0
Control Web Address: http://192.168.1.2
Setup Web Address: http://192.168.1.2/setup.html
Setup Username: admin
Setup Password: webrelay (all lower case)
Control Password: no password set

Full Users Manual may be downloaded from http://www.ControlByWeb.com

For technical support, email questions to support@ControlByWeb.com

Pinout

Pin	Description
Vin+	Power Supply Input +
Vin-	Power Supply Input -
+5	+5V DC output (50mA max)
Gnd	Ground (common) for 5V out
In1+	Optically-Isolated Input 1 +
In1-	Optically-Isolated Input 1 -
In2+	Optically-Isolated Input 2+
In2-	Optically-Isolated Input 2-
1C	Relay 1 common
1NC	Relay 1 Normally Closed
1NO	Relay 1 Normally Open
2C	Relay 2 Common
2NC	Relay 2 Normally Closed
2NO	Relay 2 Normally Open

Note: The X-301 can be configured to operate at 10Mbps or 100Mbps. For best power savings and long term performance the 10Mbps setting is recommended.

CONTROL by WEB™

www.ControlByWeb.com

a division of....
**Xytronix Research & Design, Inc.
Nibley, Utah, USA**

Rev 2.0